


About the loft angle adjustment function

8 types of loft angle adjustment possible

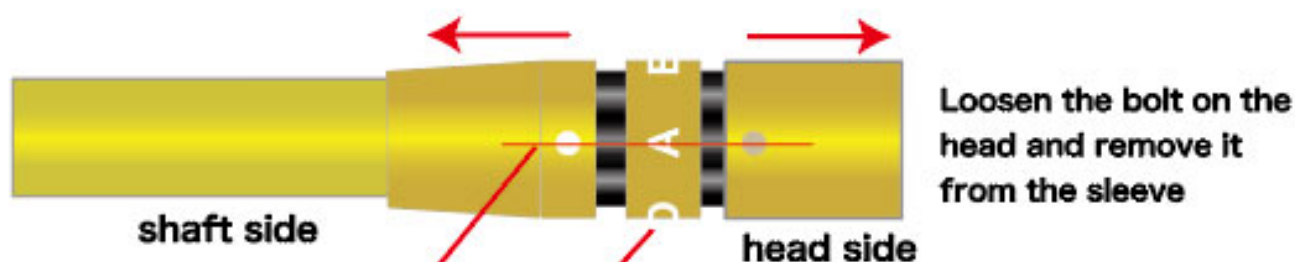

Please follow this line

Turn this ring to your desired loft position

AD	9.5°(0.5°hook face)
D	8.5°(1°hook face)
CD	9.5°(1°hook face)
C	10.5°(1°hook face)
BC	11.5°(0.5°hook face)
B	12.5°(square)
AB	11.5°(square)
A	10.5°(square)



Be sure to use the special wrench to adjust the loft angle.

Using wrenches from other manufacturers may damage the screw holes.

When closing, close it until you hear a "click" sound.